


TH-T-L20

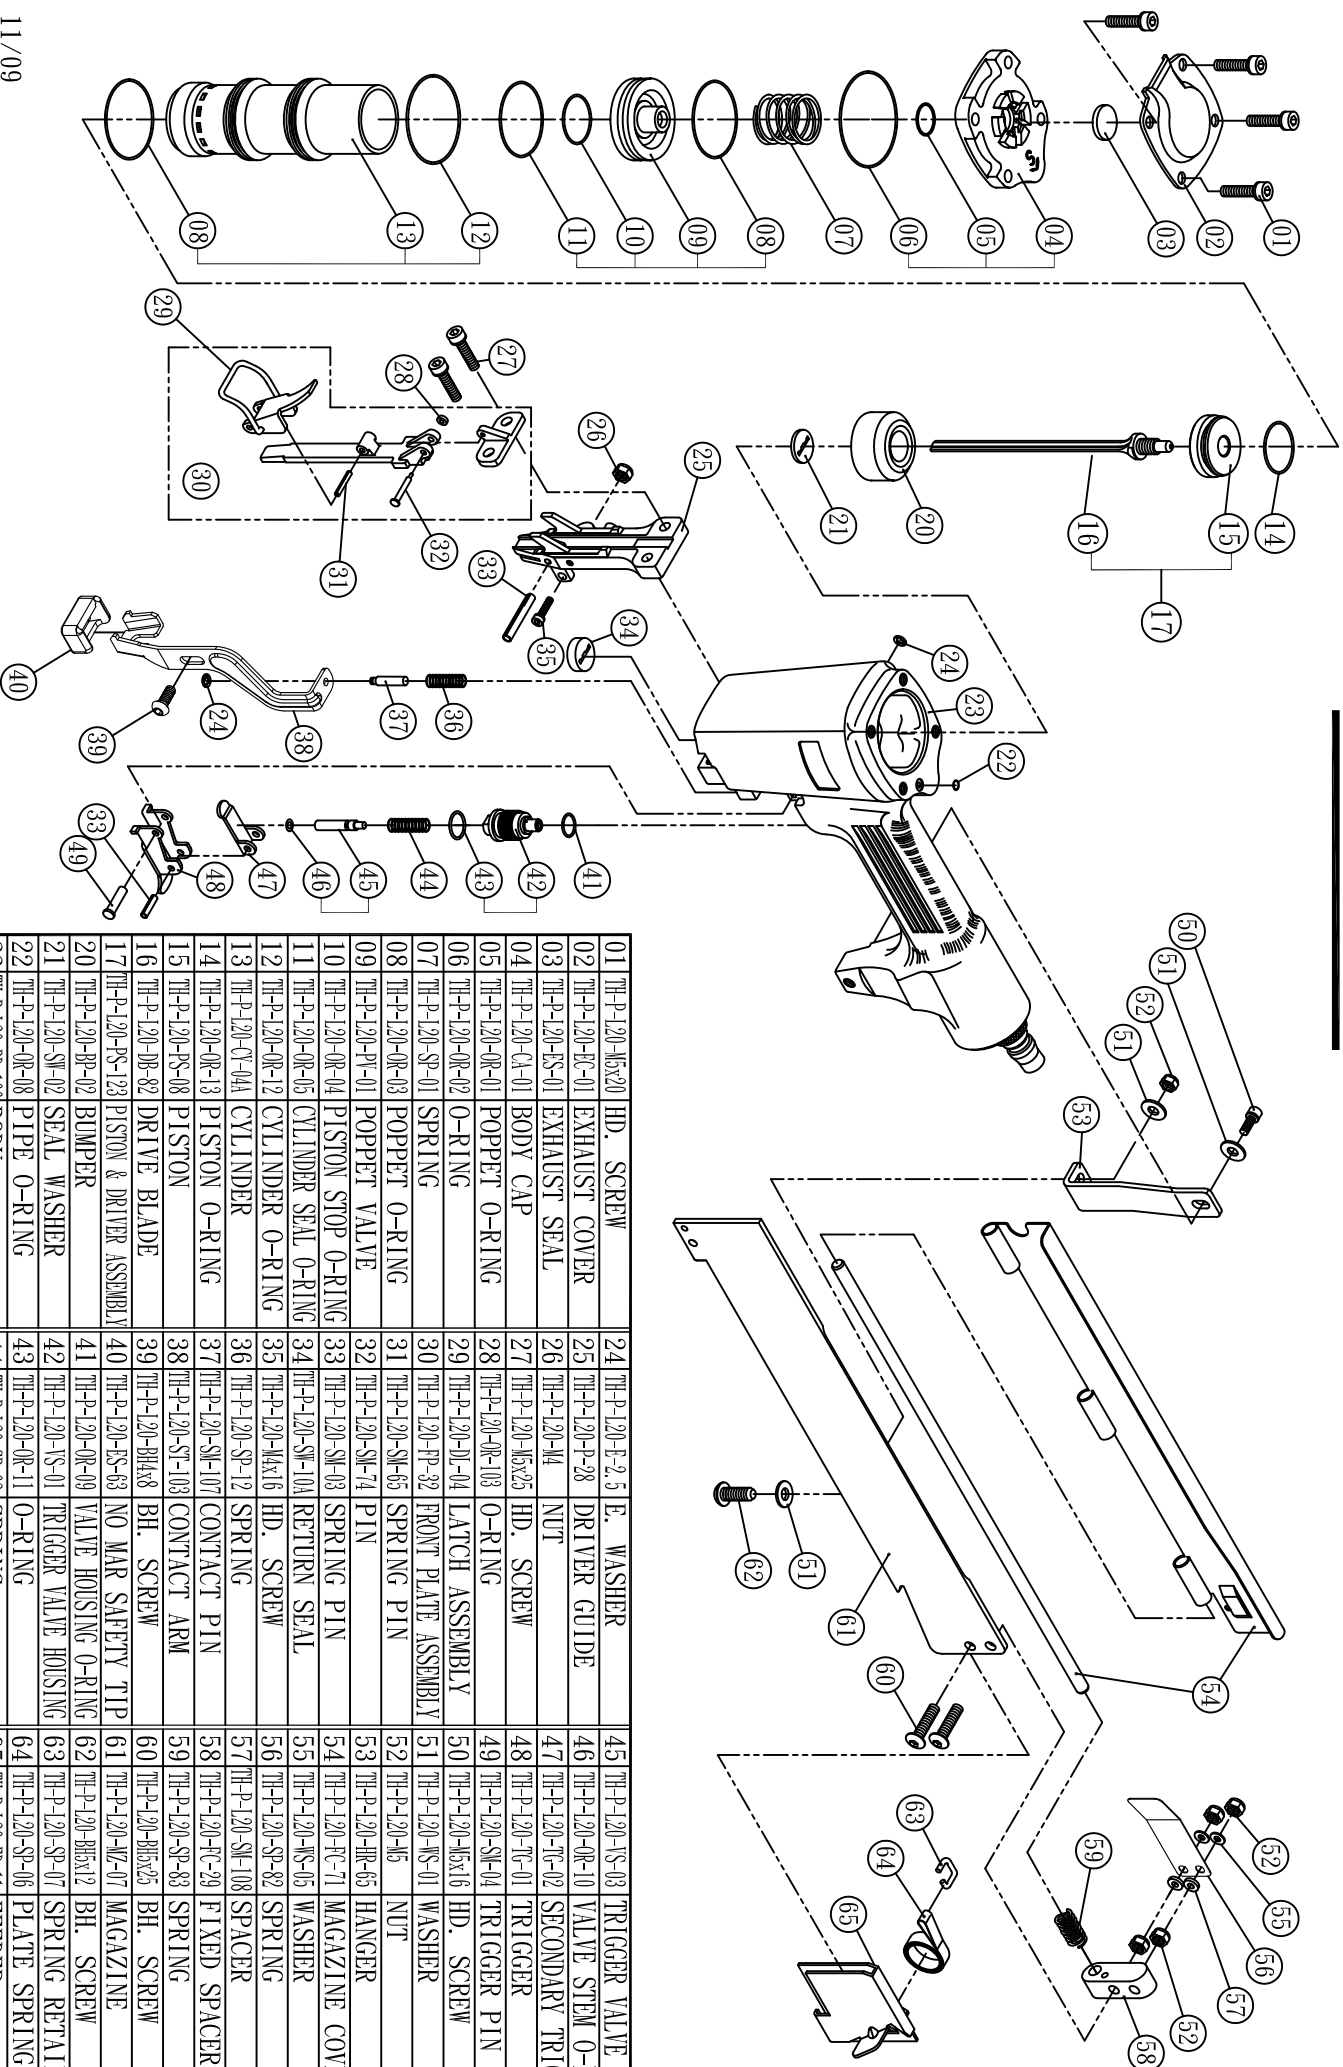

01	TH-P-L20-H5-20	HD. SCREW	24	TH-P-L20-E-2.5	E. WASHER	45	TH-P-L20-S-03	TRIGGER VALVE STEM
02	TH-P-L20-FC-01	EXHAUST COVER	25	TH-P-L20-P-28	DRIVER GUIDE	46	TH-P-L20-OR-10	VALVE STEM O-RING
03	TH-P-L20-FS-01	EXHAUST SEAL	26	TH-P-L20-M4	NUT	47	TH-P-L20-TG-02	SECONDARY TRIGGER
04	TH-P-L20-C1-01	BODY CAP	27	TH-P-L20-H5-25	HD. SCREW	48	TH-P-L20-TG-01	TRIGGER
05	TH-P-L20-OR-01	POPPELT O-RING	28	TH-P-L20-OR-103	O-RING	49	TH-P-L20-S1-04	TRIGGER PIN
06	TH-P-L20-OR-02	O-RING	29	TH-P-L20-DL-04	LATCH ASSEMBLY	50	TH-P-L20-H5-16	HD. SCREW
07	TH-P-L20-SP-01	SPRING	30	TH-P-L20-FP-32	FRONT PLATE ASSEMBLY	51	TH-P-L20-MS-01	WASHER
08	TH-P-L20-OR-03	POPPELT O-RING	31	TH-P-L20-S1-65	SPRING PIN	52	TH-P-L20-M5	NUT
09	TH-P-L20-PV-01	POPPELT VALVE	32	TH-P-L20-S1-74	PIN	53	TH-P-L20-HR-65	HANGER
10	TH-P-L20-OR-04	PISTON STOP O-RING	33	TH-P-L20-S1-03	SPRING PIN	54	TH-P-L20-FC-71	MAGAZINE COVER
11	TH-P-L20-OR-05	CYLINDER SEAL O-RING	34	TH-P-L20-S1-104	RETURN SEAL	55	TH-P-L20-MS-15	WASHER
12	TH-P-L20-OR-12	CYLINDER O-RING	35	TH-P-L20-M4-16	HD. SCREW	56	TH-P-L20-SP-32	SPRING
13	TH-P-L20-C1-04A	CYLINDER	36	TH-P-L20-S1-12	SPRING	57	TH-P-L20-S1-108	SPACER
14	TH-P-L20-OR-13	PISTON O-RING	37	TH-P-L20-S1-107	CONTACT PIN	58	TH-P-L20-FC-29	FIXED SPACER
15	TH-P-L20-PS-08	PISTON	38	TH-P-L20-ST-103	CONTACT ARM	59	TH-P-L20-SP-33	SPRING
16	TH-P-L20-DB-82	DRIVE BLADE	39	TH-P-L20-B14-8	BH. SCREW	60	TH-P-L20-B16-25	BH. SCREW
17	TH-P-L20-PS-123	PISTON & DRIVER ASSEMBLY	40	TH-P-L20-FS-63	NO MAR SAFETY TIP	61	TH-P-L20-M-07	MAGAZINE
20	TH-P-L20-SP-02	BUMPER	41	TH-P-L20-OR-09	VALVE HOUSING O-RING	62	TH-P-L20-B16-12	BH. SCREW
21	TH-P-L20-S1-02	SEAL WASHER	42	TH-P-L20-MS-01	TRIGGER VALVE HOUSING	63	TH-P-L20-SP-07	SPRING RETAINER
22	TH-P-L20-OR-08	PIPE O-RING	43	TH-P-L20-OR-11	O-RING	64	TH-P-L20-SP-06	PLATE SPRING
23	TH-P-L20-BD-100	BODY	44	TH-P-L20-SP-02	SPRING	65	TH-P-L20-DF-11	FEEDER