


TH-T-N20

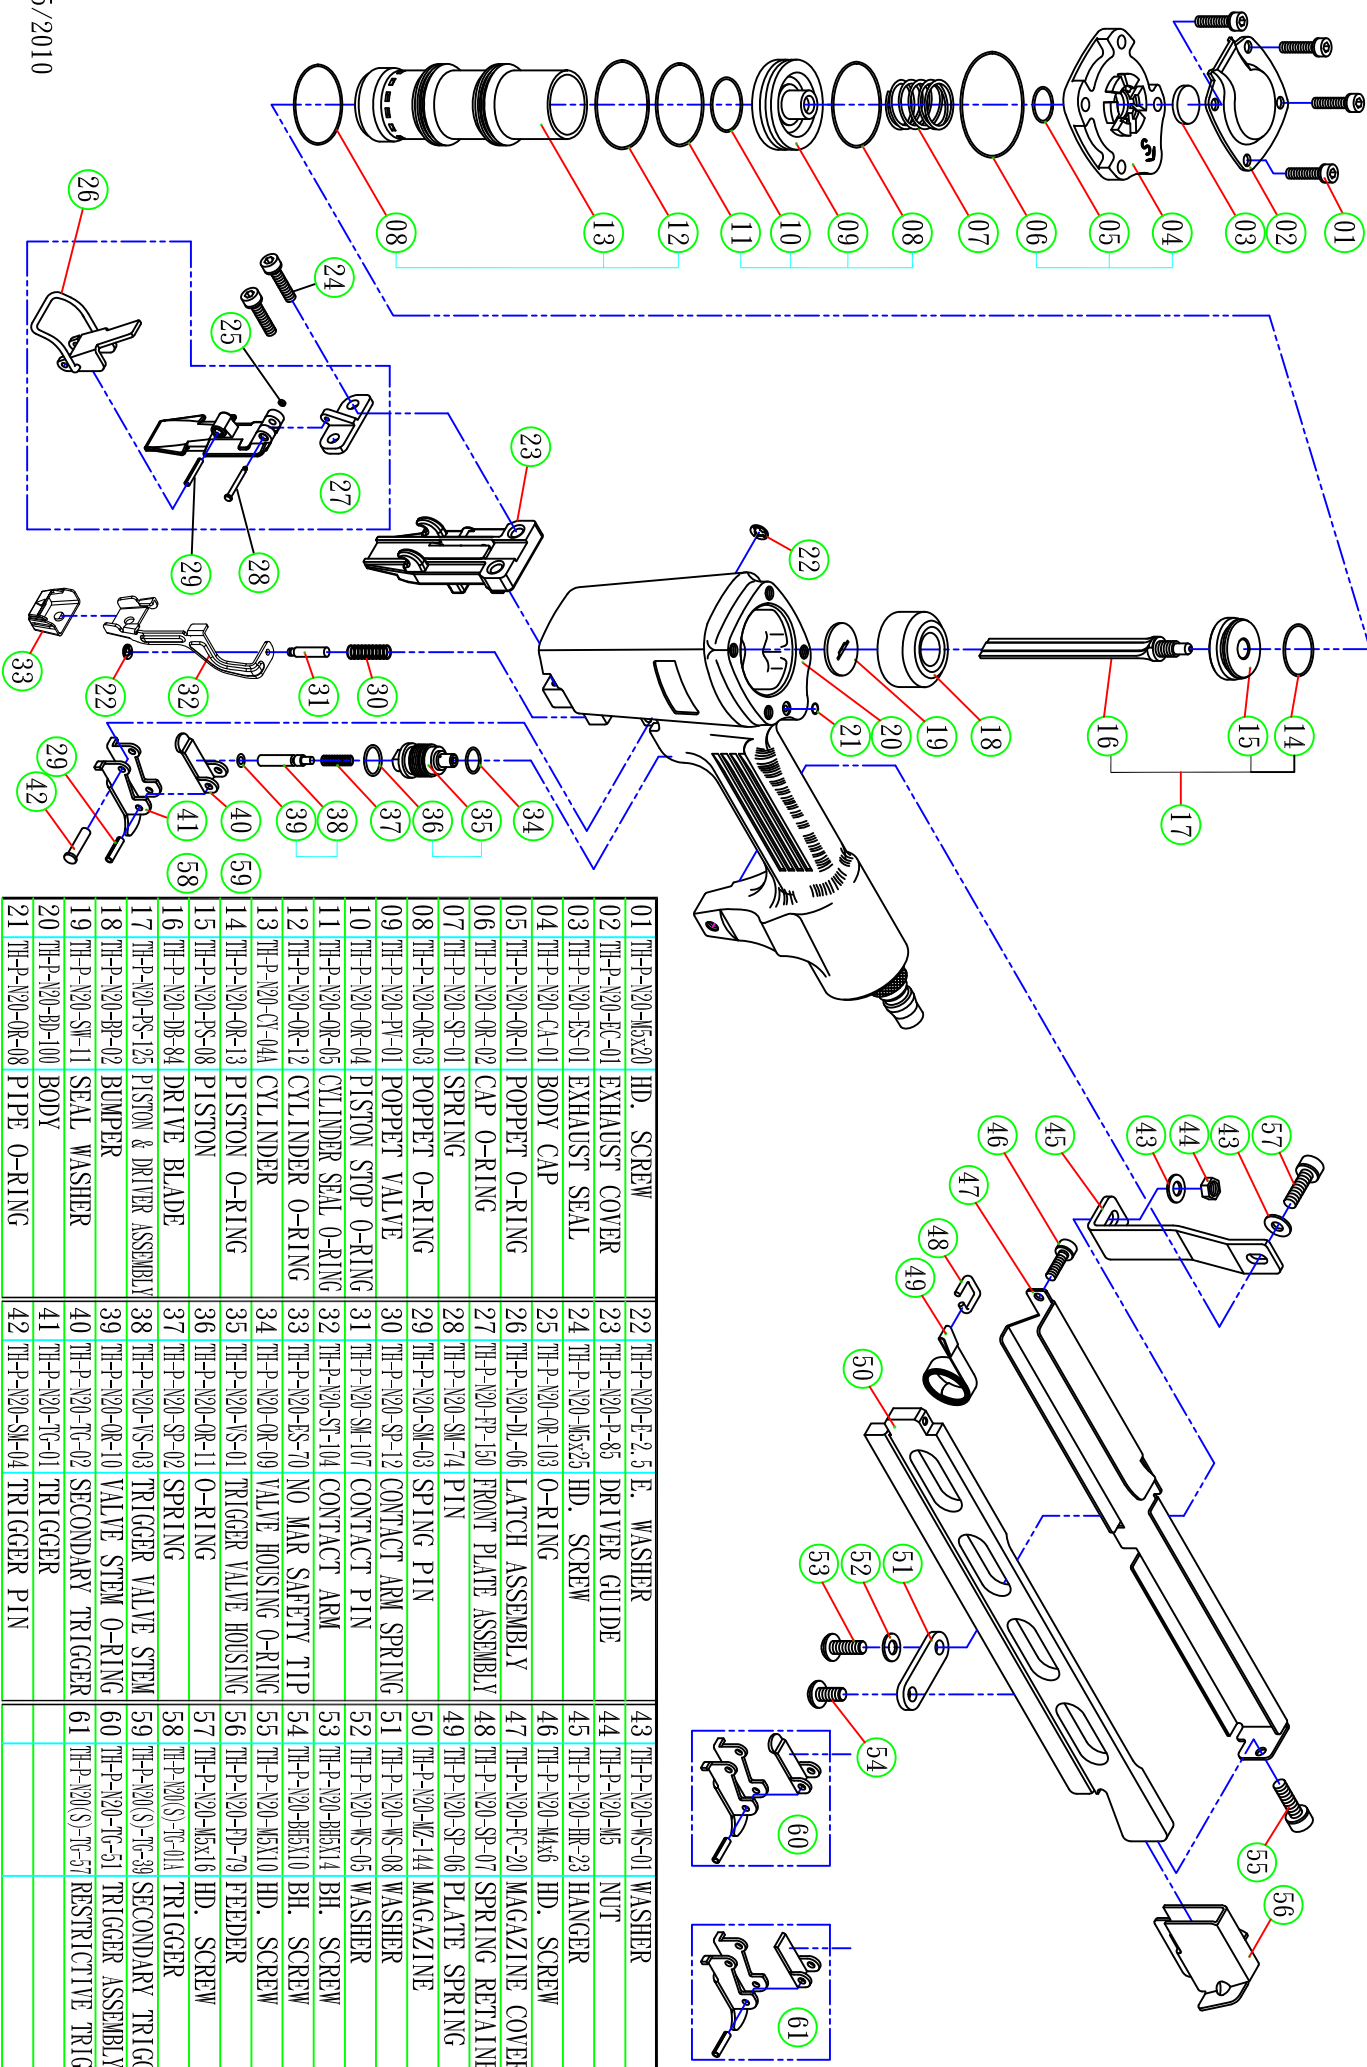

01	TH-P-N20-M6x20	HD. SCREW	22	TH-P-N20-E-2.5	E. WASHER	43	TH-P-N20-WS-01	WASHER
02	TH-P-N20-EC-01	EXHAUST COVER	23	TH-P-N20-P-85	DRIVER GUIDE	44	TH-P-N20-M5	NUIT
03	TH-P-N20-ES-01	EXHAUST SEAL	24	TH-P-N20-M6x25	HD. SCREW	45	TH-P-N20-HR-23	HANGER
04	TH-P-N20-CA-01	BODY CAP	25	TH-P-N20-OR-103	O-RING	46	TH-P-N20-MAK6	HD. SCREW
05	TH-P-N20-OR-01	POPJET O-RING	26	TH-P-N20-DL-166	LATCH ASSEMBLY	47	TH-P-N20-TC-20	MAGAZINE COVER
06	TH-P-N20-OR-02	CAP O-RING	27	TH-P-N20-PP-150	FRONT PLATE ASSEMBLY	48	TH-P-N20-SP-07	SPRING RETAINER
07	TH-P-N20-SP-01	SPRING	28	TH-P-N20-SH-74	PIN	49	TH-P-N20-SP-06	PLATE SPRING
08	TH-P-N20-OR-03	POPJET O-RING	29	TH-P-N20-SH-03	SPRING PIN	50	TH-P-N20-WZ-144	MAGAZINE
09	TH-P-N20-PI-01	POPJET VALVE	30	TH-P-N20-SP-12	CONTACT ARM SPRING	51	TH-P-N20-WS-08	WASHER
10	TH-P-N20-OR-04	PISTON STOP O-RING	31	TH-P-N20-SH-107	CONTACT PIN	52	TH-P-N20-WS-05	WASHER
11	TH-P-N20-OR-05	CYLINDER SEAL O-RING	32	TH-P-N20-ST-104	CONTACT ARM	53	TH-P-N20-BH514	BH. SCREW
12	TH-P-N20-OR-12	CYLINDER O-RING	33	TH-P-N20-ES-70	NO MAR SAFETY TIP	54	TH-P-N20-BH510	BH. SCREW
13	TH-P-N20-CI-04A	CYLINDER	34	TH-P-N20-OR-09	VALVE HOUSING O-RING	55	TH-P-N20-M510	BH. SCREW
14	TH-P-N20-OR-13	PISTON O-RING	35	TH-P-N20-IS-01	TRIGGER VALVE HOUSING	56	TH-P-N20-PD-79	FEEDER
15	TH-P-N20-RS-08	PISTON	36	TH-P-N20-OR-11	O-RING	57	TH-P-N20-M5x16	HD. SCREW
16	TH-P-N20-DB-04	DRIVE BLADE	37	TH-P-N20-SP-02	SPRING	58	TH-P-N20(S)-TC-04	TRIGGER
17	TH-P-N20-PS-125	PISTON & DRIVER ASSEMBLY	38	TH-P-N20-IS-03	TRIGGER VALVE STEM	59	TH-P-N20(S)-TC-39	SECONDARY TRIGGER
18	TH-P-N20-BR-02	BUMPER	39	TH-P-N20-OR-10	VALVE STEM O-RING	60	TH-P-N20-TC-51	TRIGGER ASSEMBLY
19	TH-P-N20-SH-11	SEAL WASHER	40	TH-P-N20-TC-02	SECONDARY TRIGGER	61	TH-P-N20(S)-TC-57	RESTRICTIVE TRIGGER
20	TH-P-N20-DB-100	BODY	41	TH-P-N20-TC-01	TRIGGER			
21	TH-P-N20-OR-08	PIPE O-RING	42	TH-P-N20-SH-04	TRIGGER PIN			