


TH-T-M20

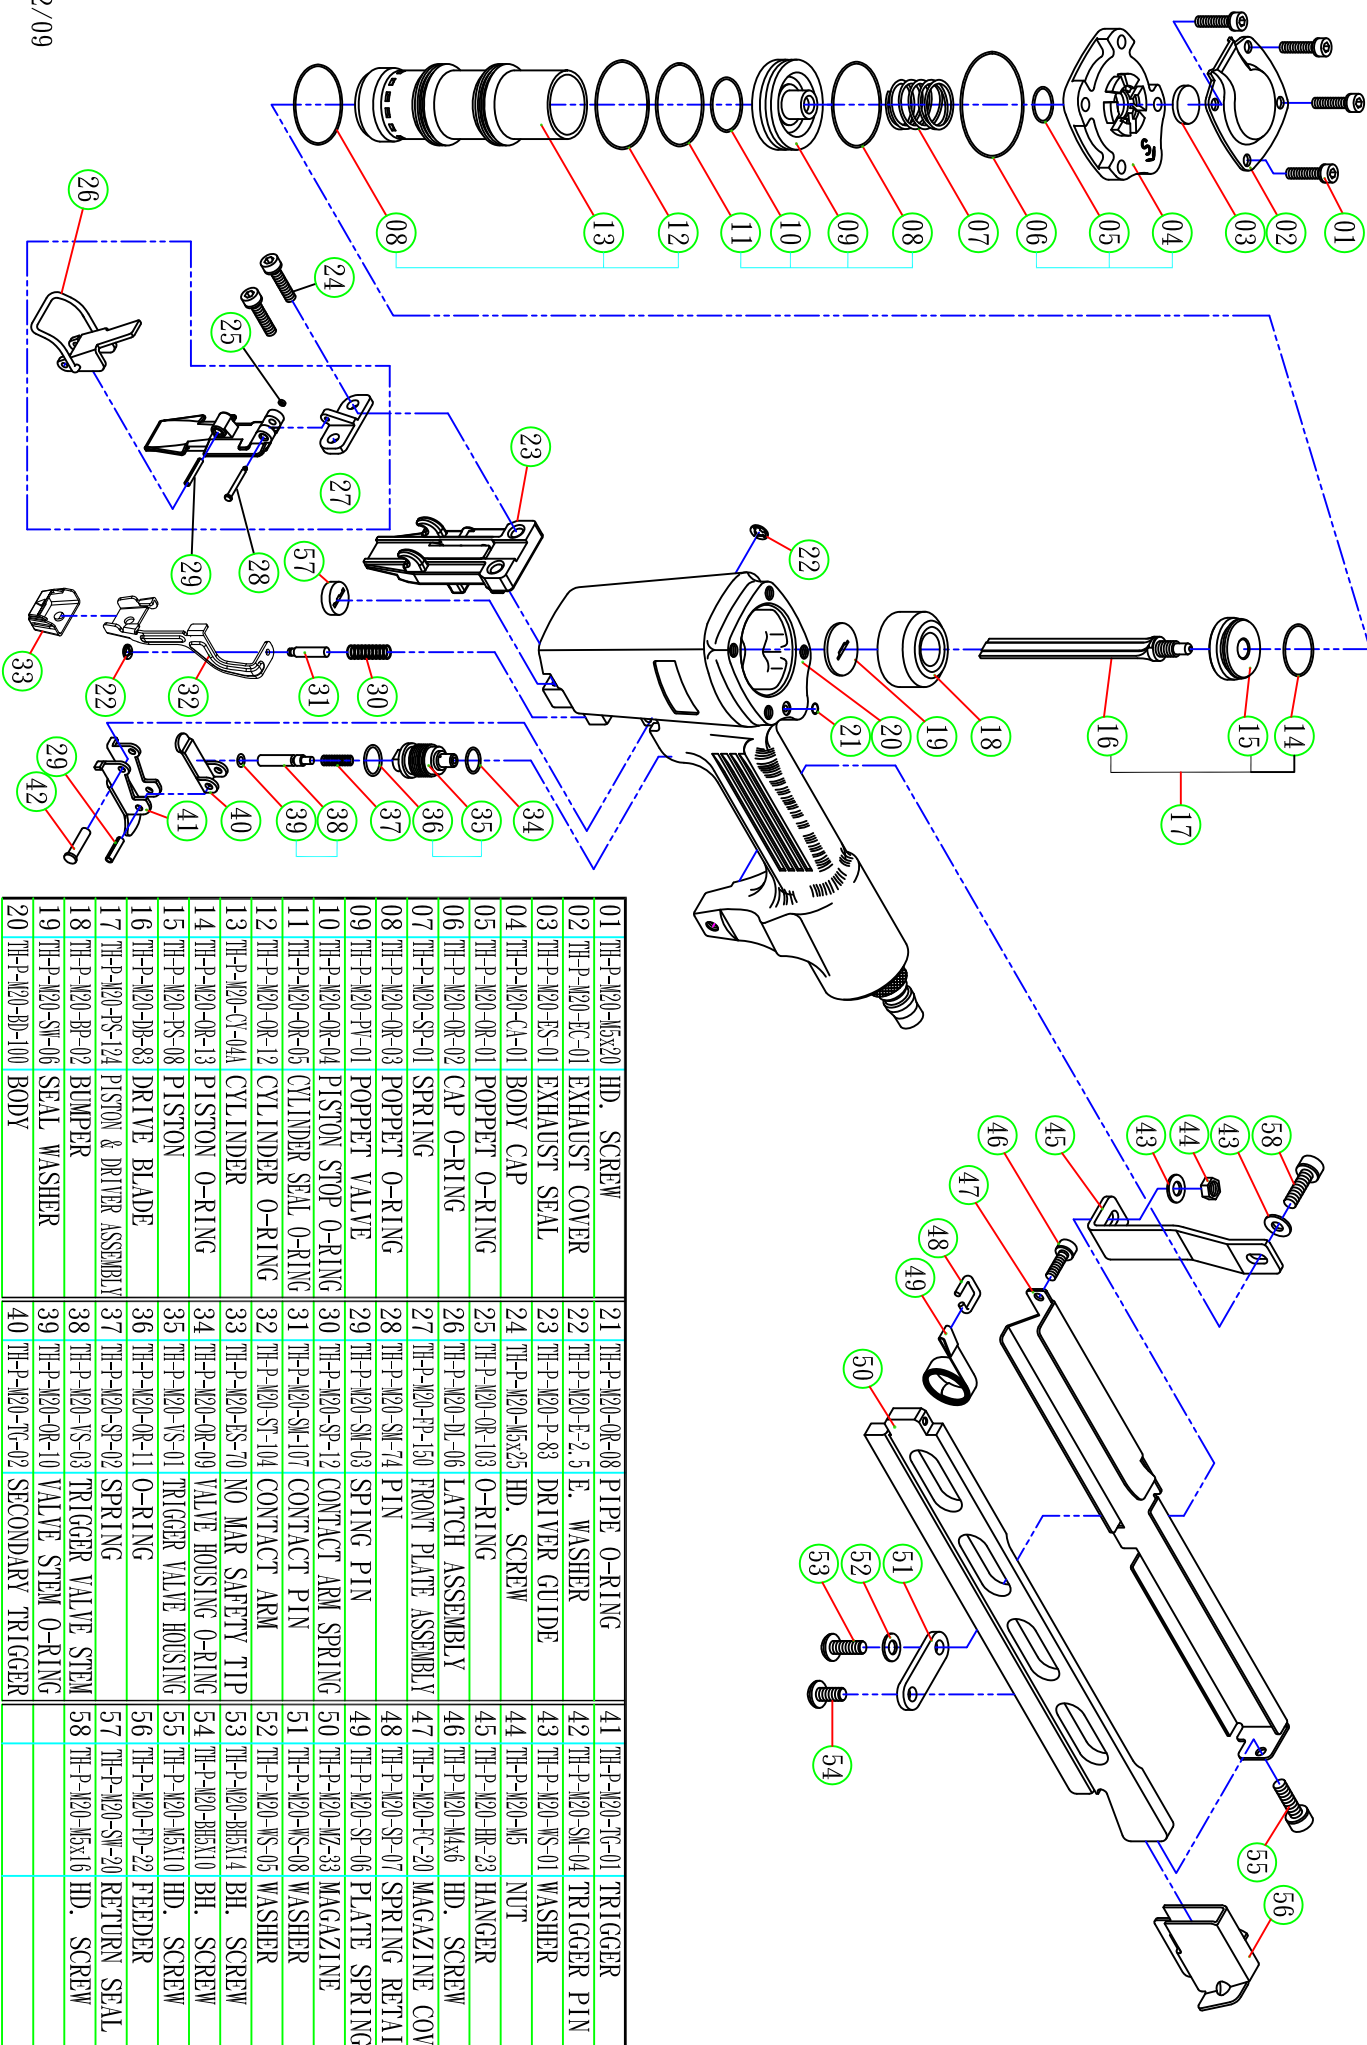

01	TH-P-M20-M5x20	HD. SCREW	21	TH-P-M20-OR-08	PIPE O-RING	41	TH-P-M20-T6-01	TRIGGER
02	TH-P-M20-EC-01	EXHAUST COVER	22	TH-P-M20-E-2.5	E. WASHER	42	TH-P-M20-SM-04	TRIGGER PIN
03	TH-P-M20-ES-01	EXHAUST SEAL	23	TH-P-M20-P-83	DRIVER GUIDE	43	TH-P-M20-NS-01	WASHER
04	TH-P-M20-CA-01	BODY CAP	24	TH-P-M20-M5x25	HD. SCREW	44	TH-P-M20-N5	NUT
05	TH-P-M20-OR-01	POPPET O-RING	25	TH-P-M20-OR-103	O-RING	45	TH-P-M20-HR-23	HANGER
06	TH-P-M20-OR-02	CAP O-RING	26	TH-P-M20-DL-06	LATCH ASSEMBLY	46	TH-P-M20-M4x6	HD. SCREW
07	TH-P-M20-SP-01	SPRING	27	TH-P-M20-PP-150	FRONT PLATE ASSEMBLY	47	TH-P-M20-FC-20	MAGAZINE COVER
08	TH-P-M20-OR-03	POPPET O-RING	28	TH-P-M20-SM-74	PIN	48	TH-P-M20-SP-07	SPRING RETAINER
09	TH-P-M20-PI-01	POPPET VALVE	29	TH-P-M20-SM-03	SPRING PIN	49	TH-P-M20-SP-06	PLATE SPRING
10	TH-P-M20-OR-04	PISTON STOP O-RING	30	TH-P-M20-SP-12	CONTACT ARM SPRING	50	TH-P-M20-MZ-33	MAGAZINE
11	TH-P-M20-OR-05	CYLINDER SEAL O-RING	31	TH-P-M20-SM-107	CONTACT PIN	51	TH-P-M20-NS-08	WASHER
12	TH-P-M20-OR-12	CYLINDER O-RING	32	TH-P-M20-ST-104	CONTACT ARM	52	TH-P-M20-NS-05	WASHER
13	TH-P-M20-CY-04A	CYLINDER	33	TH-P-M20-ES-70	NO MAR SAFETY TIP	53	TH-P-M20-BH514	BH. SCREW
14	TH-P-M20-OR-13	PISTON O-RING	34	TH-P-M20-OR-09	VALVE HOUSING O-RING	54	TH-P-M20-BH510	BH. SCREW
15	TH-P-M20-RS-08	PISTON	35	TH-P-M20-NS-01	TRIGGER VALVE HOUSING	55	TH-P-M20-M5x10	HD. SCREW
16	TH-P-M20-DB-83	DRIVE BLADE	36	TH-P-M20-OR-11	O-RING	56	TH-P-M20-FD-22	FEEDER
17	TH-P-M20-RS-124	PISTON & DRIVER ASSEMBLY	37	TH-P-M20-SP-02	SPRING	57	TH-P-M20-SW-20	RETURN SEAL
18	TH-P-M20-BR-02	BUMPER	38	TH-P-M20-NS-03	TRIGGER VALVE STEM	58	TH-P-M20-M5x16	HD. SCREW
19	TH-P-M20-SM-06	SEAL WASHER	39	TH-P-M20-OR-10	VALVE STEM O-RING			
20	TH-P-M20-DB-100	BODY	40	TH-P-M20-T6-02	SECONDARY TRIGGER			